

Manual, Assembly instruction: Brodit 806246

Left mount

1.)




2.)



3.)



4.)

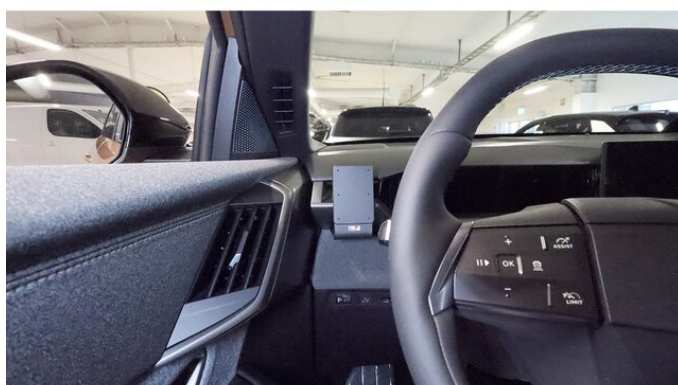

Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the panel and the trim. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover.
2. Press the upper part of the mount into the gap next to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).
3. Press the lower edge of the mount downward and forward. Press forward on the lower part of the mount so the lower edge hooks between the dashboard sections.
4. The ProClip mount is in place.