


Manual, Assembly instruction: Brodit 832191

Console mount

1.)

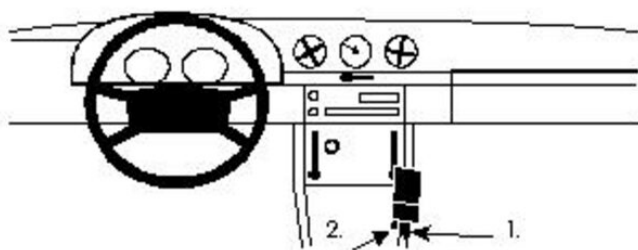

Attention! Read all instructions before attaching the ProClip

1. Clean surface at pos.
2. with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.
2. Hook the lower part of the ProClip, with curve, under the edge of the console at pos.
- 1.
3. Hook the upper part of the ProClip, with adhesive tape, over the edge at pos. 2.