


Manual, Assembly instruction: Brodit 832468

Console mount

1.)

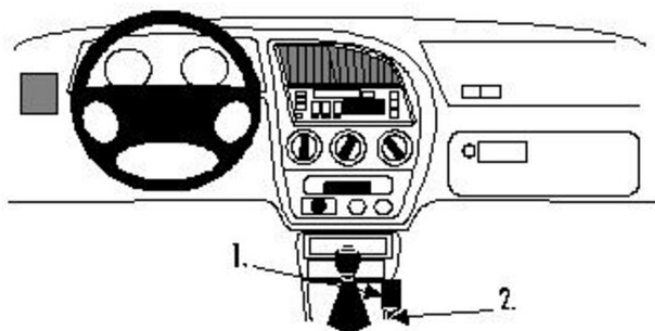

Attention! Read all instructions before attaching the ProClip. Clean the surface at pos. 1 with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.

1. Hook the upper part of the ProClip, with adhesive tape, over the edge of the console.
2. Press downwards on the right side of the ProClip so the lower part hooks under the edge of the console.