

Manual, Assembly instruction: Brodit 833524

Console mount


1.)



2.)



3.)

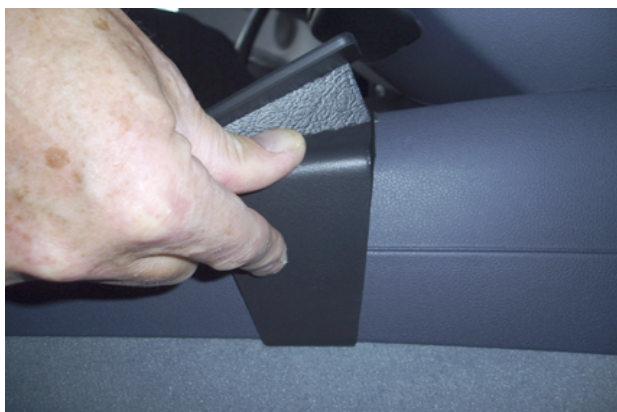

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the adhesive tape covers on the ProClip. Place the left end of the ProClip over the edge of the console.
2. Press downwards on the right side of the ProClip so the angled edge hooks under the console.
3. Press the ProClip towards the console so it hooks in place properly.
4. The ProClip is in place.