



Manual, Assembly instruction: Brodit 833597

Console mount

1.)

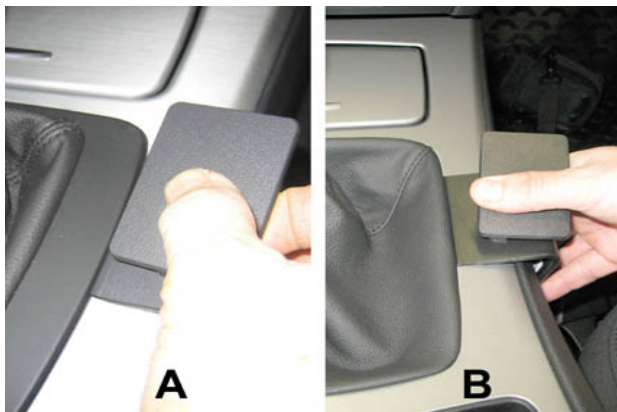

2.)

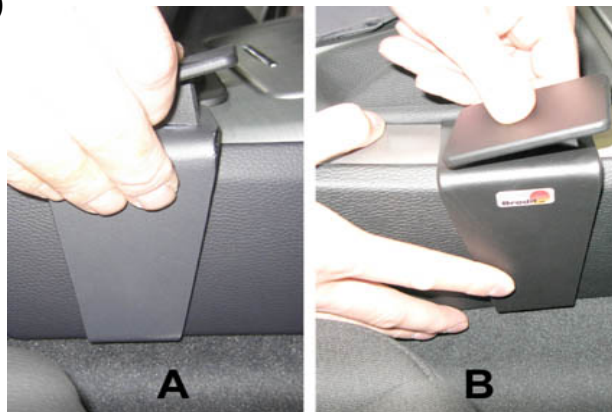

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. Peel off the adhesive tape covers on the ProClip. 1A. Automatic shift: Hook the angled edge on the left part of the ProClip into the gap between the panel surrounding the gear shift and the console. 1B. Manual shift: Place the angled edge on the left part of the ProClip onto the console and slide/press it leftwards so the angled edge hooks into the gap between the rubber surrounding the gear shift and the console. 2A and B. Press downwards on the right side of the ProClip so the angled right edge hooks under the edge of the console.

3. The ProClip is in place in an automatic shift vehicle.

4. The ProClip is in place in a manual shift vehicle.