


Manual, Assembly instruction: Brodit 834458

Console mount ONLY for automatic gear shift.

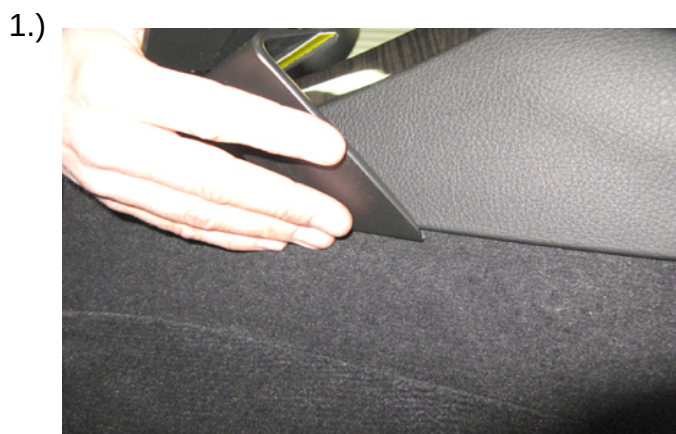

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the right part of the ProClip into the gap in the center console sidewall.
2. Press the ProClip upward/leftward so the left part hooks over the console edge.
3. Hook the angled edge on the left part of the ProClip into the gap between the coin compartment and the console edge.
4. The ProClip is in place.