

Manual, Assembly instruction: Brodit 834533

Console mount


1.)



2.)



3.)

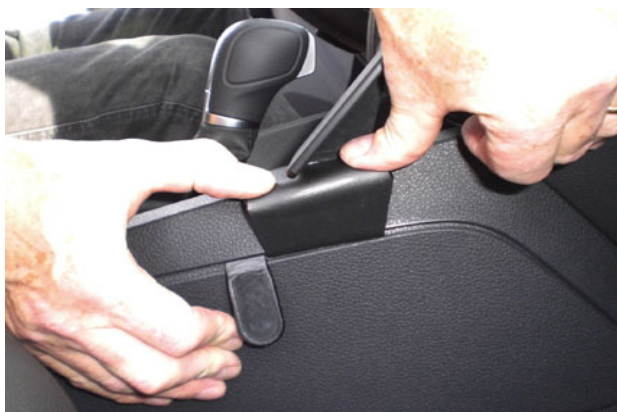

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener up into the gap in the console sidewall, to widen the gap. Peel off the cover of adhesive tape on the ProClip.
2. Place the left side of the ProClip over the console edge.
3. Press firmly down on top of the ProClip so the angled edge hooks into the gap next to the gap opener. Pull out the gap opener.
4. The ProClip is in place.