


Manual, Assembly instruction: Brodit 835434

Console mount, Left

1.)



2.)

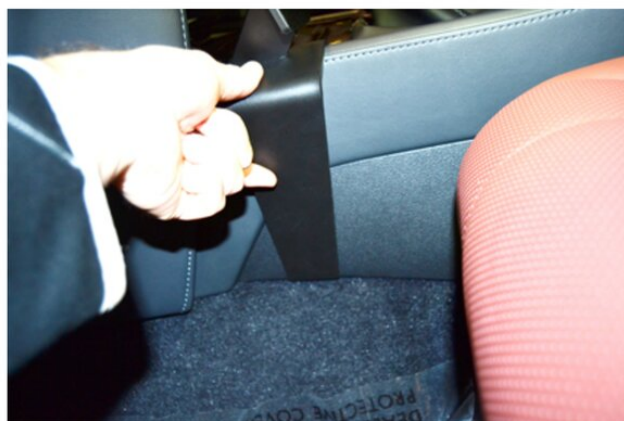

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Place the ProClip over the edge of the floor console frame.
2. Press downward on the left side of the ProClip and hook the angled lower edge under the floor console sidewall.
3. The ProClip is in place.
4. The ProClip is in place.