


Manual, Assembly instruction: Brodit 835747

Console mount

1.)



2.)

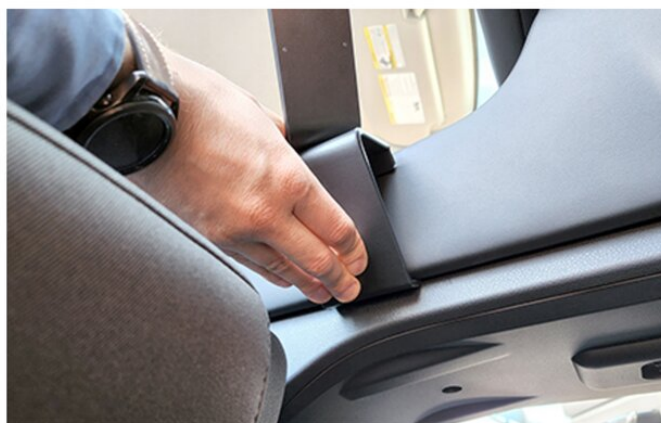

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip first: any holder + equipment is to be attached after the ProClip is in place.

1. This ProClip will be installed on the passenger side of the center console. There is a small storage tray right in front of the cup holder. The front edge of the ProClip should line up with this storage tray (see photo).

2. Press the lower lip of the ProClip into the gap between the soft material and the hard plastic underside of the console.

3. Pull the upper part of the ProClip up and over the top of the center console.

4. The ProClip is in place.