


Manual, Assembly instruction: Brodit 835966

Console mount

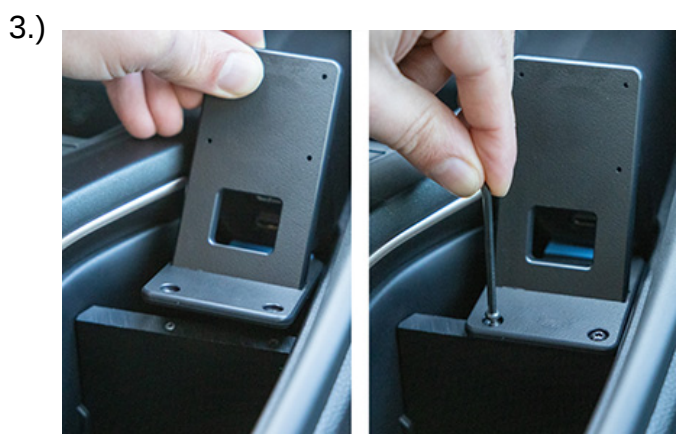

Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip mount first: any holder & equipment is to be attached after the mount is in place. This mount consists of two parts.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Remove the divider by the cup holders.

2. Hold the flat part of the mount, the divider block, with the sides angled forward, so the shorter side is pointing forward toward the dashboard. Place the divider block in the retention slats.

3. Hook the face plate part of the mount under the USB ports frame. Attach the face plate onto the divider block with the enclosed screws.

4. The ProClip mount is in place.