


Manual, Assembly instruction: Brodit 836046

Console mount, Left

1.)

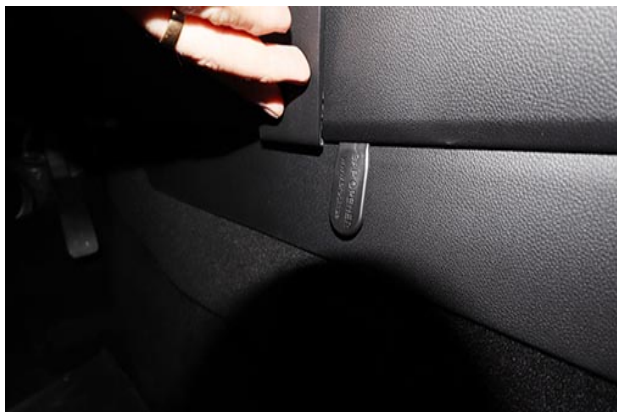

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder & equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Press the thin end of the enclosed gap opener into the gap in the center console sidewall, to widen the gap. Peel off the adhesive tape cover. Hook the lower edge of the mount into the gap next to the gap opener. Pull out the gap opener.

2. Pull the mount upward. Keep the upper part of the mount on a distance from the padded center console so it does not touch it.

3. Hook the upper edge of the mount over the center console frame.

4. The ProClip mount is in place.