


Manual, Assembly instruction: Brodit 836101

Console mount

1.)



2.)

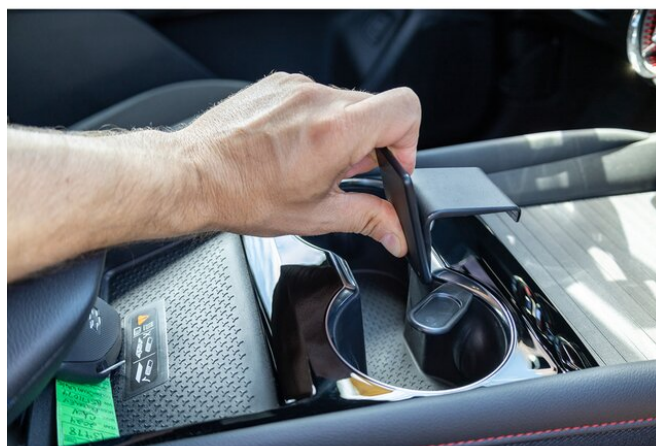

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the cup holder and the surrounding frame, to widen the gap. Peel off the adhesive tape cover on the mount.
2. Place the mount centered between the cup holder. Press the short edge of the mount into the gap next to the Gap Opener (Spaltöffner).
3. Press forward on the faceplate of the mount until the long edge hooks + clips over the panel surrounding the cup holders. Pull out the Gap Opener (Spaltöffner).
4. The ProClip mount is in place.