


Manual, Assembly instruction: Brodit 836138

Console mount

1.)



2.)

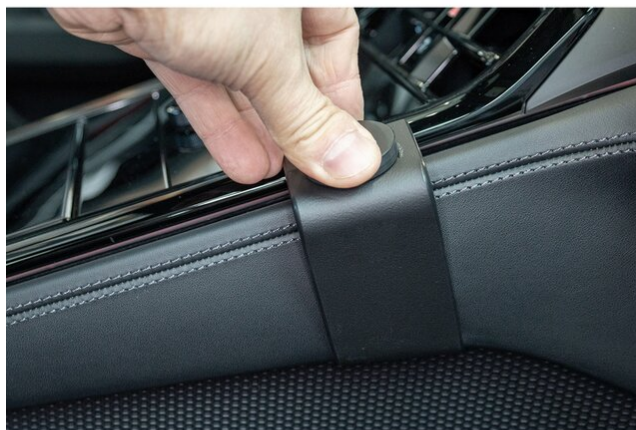

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of two parts: a faceplate and a mount.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Position the mount in line with the console switches. Place the mount on the console side, so the edge rests against the raised console trim.

2. Press downward on top of the mount so the lower edge hooks under the edge of the console sidewall.

3. Place the included locking washer into the recess on top of the mount. Place the faceplate onto the mount. Adjust the faceplate into the desired angle. The faceplate may be installed for use by the driver or passenger. Attach the faceplate to the mount with the included screw.

4. The ProClip mount is in place.