


## Manual, Assembly instruction: Brodit 836147

Console mount

1.) 2.)



3.) 4.)

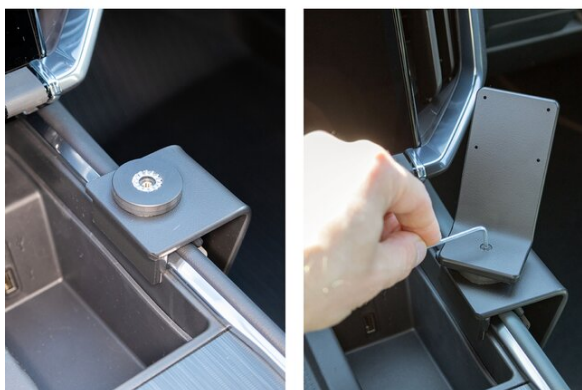

**Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of two parts: A mount and a faceplate.**

**1.** Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Hook the upper part of the mount over the console edge. The tape should rest on the accessory tray wall below the trim

**2.** Press the thin end of the two included Gap Opener (Spaltöffner)s into the gap at the bottom of the console sidewall, to widen the gap on either side of the mount. Press down on the top of the mount until the lower edge hooks + clips into the gap between the Gap Opener (Spaltöffner)s. Press inward and upward on the bottom of the mount so the edge goes all the way into the gap. Pull out the Gap Opener (Spaltöffner)s.

**3.** Place the included locking washer into the recess on top of the mount. Place the faceplate onto the mount. Adjust the faceplate into the desired angle. The faceplate may be installed for use by the driver or passenger. Attach the faceplate to the mount with the included screw.

**4.** The ProClip mount is in place.