

Manual, Assembly instruction: Brodit 836149

Console mount


1.)



2.)



3.)

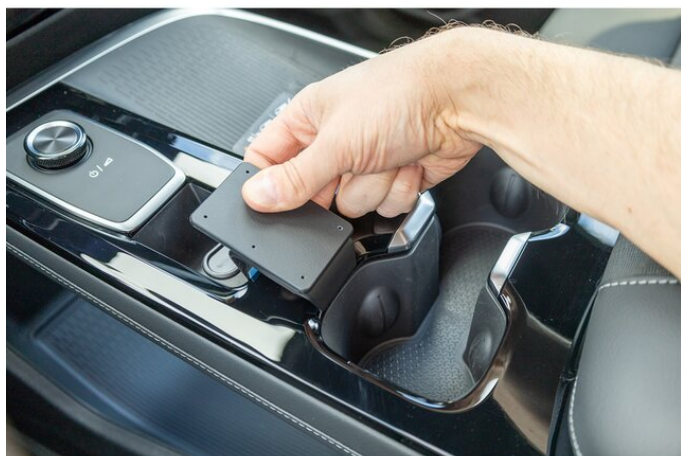

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Press the thin end of the included Gap Opener (Spaltöffner) into the gap between the accessory tray side wall and the top trim, to widen the gap near the lower corner.

2. Hook the edge of the short lower part of the mount into the gap between the left cup holder and the top trim.

3. Pull + Flex the mount forward. Press the mount downward until the upper edge hooks + clips into the gap at the top of the accessory tray. Pull out the Gap Opener (Spaltöffner).

4. The ProClip mount is in place.