


Manual, Assembly instruction: Brodit 836203

Console mount

1.)



2.)

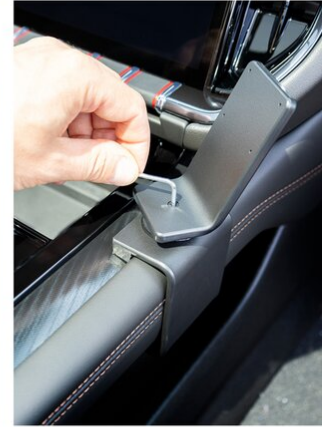

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of two parts: a faceplate and a mount.

1. Align the mount just before the console sidewall angles up. Press the lower edge into the gap under the center console sidewall. Pull + Flex the top of the mount upward and over the console top without touching the padded console frame. Rest the upper edge against the inner sidewall of the console.

2. Place the included locking washer into the recess on top of the mount. Place the faceplate onto the mount. Adjust the faceplate into the desired angle. The faceplate may be installed for use by the driver or passenger. Attach the faceplate to the mount with the included screw.

3. This mount may be installed on the left or right side of the console

4. The ProClip mount is in place.