

Manual, Assembly instruction: Brodit 836213

Console mount


1.)



2.)



3.)

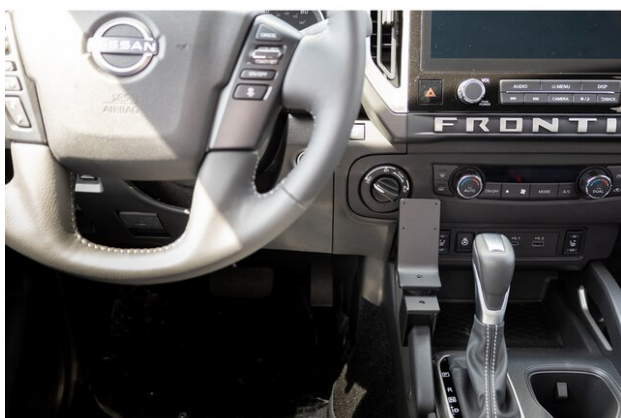

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of two parts: a mount and a side plate.

1. Position the mount so it opens to the right. Hook over the top of the handlebar and then press the bottom into the opening. Ensure the mount is positioned on the front part of the sloping of the grab bar, as shown in the pictures. Place the side plate onto the mount so the holes match. Use the included screws to secure the side plate onto the mount.

2. Place the included locking washer into the recess on top of the mount. Place the faceplate onto the mount. Adjust the faceplate into the desired angle. The faceplate may be installed for use by the driver or the passenger. Attach the faceplate to the mount with the included screw.

3. The mount may be installed both on the left or right console grab bars.

4. The ProClip mount is in place.