


Manual, Assembly instruction: Brodit 836218

Console mount

1.)



2.)

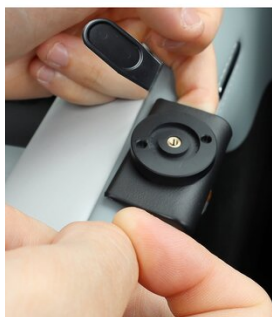

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place. This mount consists of two parts: a faceplate and a mount.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap under the center console sidewall, to widen the gap. Hook the angled edge on the lower part of the mount into the gap next to the Gap Opener (Spaltöffner). Press upward on the bottom of the mount so the angled edge goes all the way into the gap. Pull out the Gap Opener (Spaltöffner).

2. Press the Gap Opener (Spaltöffner) into the gap between the center console top and the center console sidewall. Pull the upper edge of the mount upward and lift it over the console edge without touching it. Hook the angled upper edge of the mount into the gap next to the Gap Opener (Spaltöffner). Press downward on top of the mount so the angled edge goes all the way into the gap. Pull out the Gap Opener (Spaltöffner).

3. Place the included locking washer into the recess on top of the mount. Place the faceplate onto the mount. Adjust the faceplate into the desired angle. The faceplate may be installed for use by the driver or passenger. Attach the faceplate to the mount with the included screw.

4. The ProClip mount is in place.