

Manual, Assembly instruction: Brodit 836239

Console mount


1.)



2.)



3.)

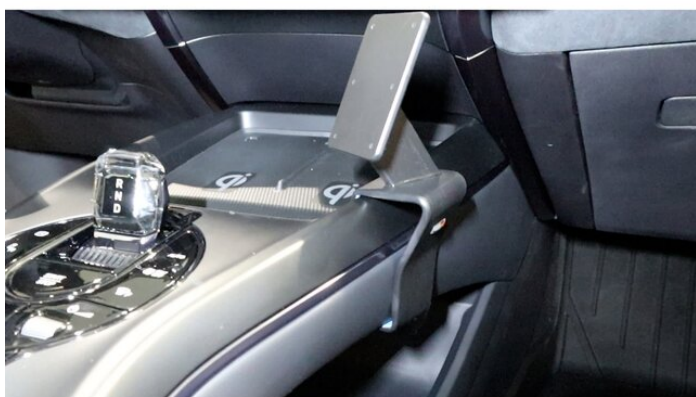

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip mount. It is important to install the mount first: any device holder + equipment is to be attached after the mount is in place.

1. Use the enclosed alcohol pad to clean the area where the mount will be installed. Peel off the adhesive tape cover. Press the lower edge of the mount into the gap on the center console sidewall.
2. Pull the upper part of the mount upward and hook the upper edge over the center console.
3. Press on the mount so the adhesive tape attaches properly.
4. The ProClip mount is in place.