



Manual, Assembly instruction: Brodit 836303

Console mount

1.) 2.)



3.) 4.)

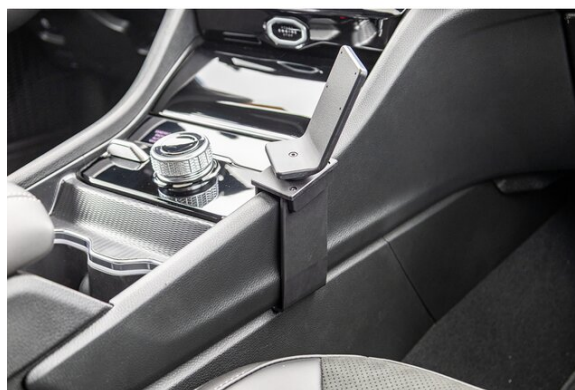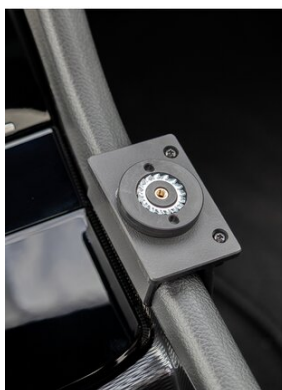

Please read all instructions and review the pictures before installing the ProClip mount. Important: The mount must be installed before attaching any device holder, cradle, or other accessory. This mount consists of three parts: A faceplate, a top mount section, and a bottom mount section.

1. Align the top mount section with the gap above the drive selector. Gently press the angled edge of the mount into the gap on the inside of the console sidewall.

2. Press the included Gap Opener (Spaltöffner)s into the gap on the outside of the console sidewall, to widen the gap on each side of the mount. Position the upper part of the bottom mount section between the console and the inside of the upper mount section. Hook the lower edge of the bottom mount section into the gap between the Gap Opener (Spaltöffner)s. Hold the top and bottom mount sections together and align the screw holes. Secure the mount sections together using the included screws. Remove the Gap Opener (Spaltöffner)s.

3. Place the included locking washer into the recess on top of the mount. Position the faceplate on the mount and adjust it to the desired angle. The faceplate can be positioned for use by either the driver or the passenger. Secure the faceplate to the mount using the included screw.

4. The ProClip mount is now installed and ready for use.