


Manual, Assembly instruction: Brodit 851516

Center mount

1.)

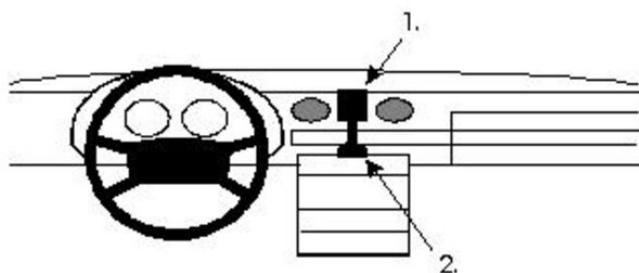

1. Clean the surface at pos.1. with the enclosed alcohol pad. Peel off the cover of adhesive tape on the ProClip.

1. Place the upper part of the ProClip over the edge on the dashboard at pos.

1.

2. Hook the angled edge on the lower part of the ProClip into the gap between the center console and the dashboard at pos. 2.