


Manual, Assembly instruction: Brodit 851517

Angled mount

1.)

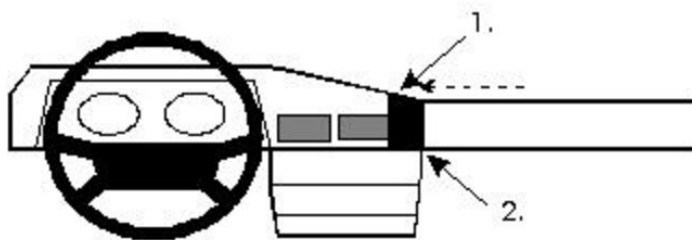

Attention! Read all instructions before attaching the ProClip.

1. Open the glove compartment.
2. Slide the grooved edge on the upper part of the ProClip into the gap between the panel and the padded dashboard at pos.1.
3. Hook the angled edge on the lower part of the ProClip into the gap between the panel frame and the padded part of the dashboard at pos. 2.