


Manual, Assembly instruction: Brodit 851526

Center mount

1.)

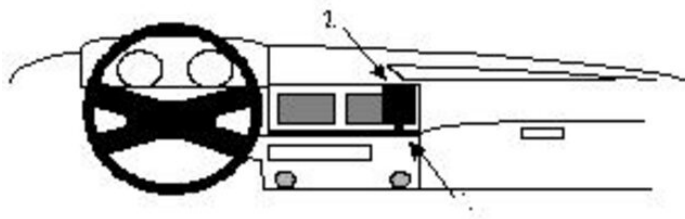

Attention! Read all instructions before attaching the ProClip.

1. Clean the surface at pos. 2 with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.
2. Press the grooved edge on the lower part of the ProClip into the gap at pos. 1 between the dashboard and the panel.
3. Press the upper part of the ProClip, with adhesive tape, onto the dashboard at pos. 2 so the adhesive tape attaches.