


Manual, Assembly instruction: Brodit 851529

Center mount

1.)

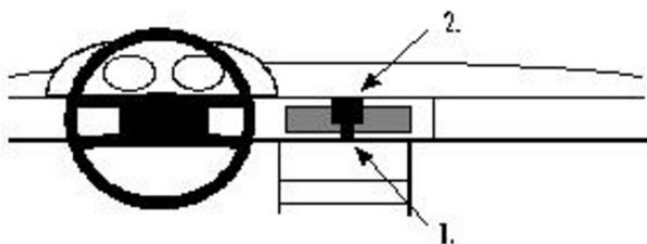

Attention! Read all instructions before attaching the ProClip.

1. Clean the surface at pos. 2 with the enclosed alcohol pad. Peel off both adhesive tape covers on the ProClip.
2. Hook the angled edge on the lower part of the ProClip into the gap at pos. 1 between the center console and the padded dashboard.
3. Press the upper part of the ProClip, with adhesive tape, onto the top of the dashboard at pos. 2 so the adhesive tape attaches.