


Manual, Assembly instruction: Brodit 851554

Center mount

1.)

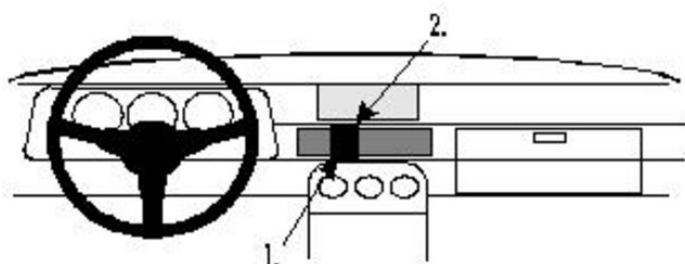

1. Press the grooved edge on the lower part of the ProClip into the gap between the air vent frame and the surrounding dashboard at pos.

1. Press until you see or hear + feel it snaps into place. (below airvent).

2. Press the grooved edge on the upper part of the ProClip into the gap between the air vent frame and the surrounding dashboard at pos.21. Press until you see or hear + feel it snaps into place. (above airvent).