


Manual, Assembly instruction: Brodit 851567

Center mount

1.)

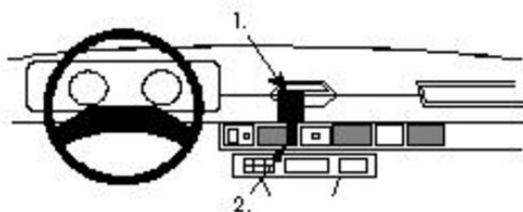

Attention! Read all instructions before attaching the ProClip.

1. Clean the surface at pos. 1 with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.
2. Hook the angled edge on the upper part of the ProClip, with adhesive tape, over the edge at pos.
- 1.
3. Hook the grooved edge on the lower part of the ProClip under the air vent frame at pos. 2.