


Manual, Assembly instruction: Brodit 851575

Center mount

1.)

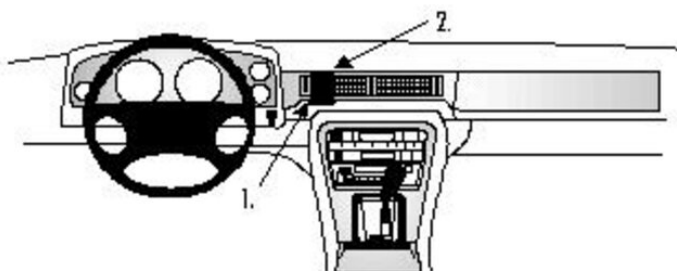

Attention! Read all instructions before attaching the ProClip.

1. Press the grooved edge on the lower part of the ProClip into the gap between the dashboard and the wood grain panel at pos.

1. Press until you see or hear + feel it snaps into place.

2. Push upper part of the ProClip upwards and forward and press the grooved edge into the gap between the wood grain panel and the padded dashboard at pos.

2. Press until you see or hear + feel it snaps into place.