


Manual, Assembly instruction: Brodit 851580

Center mount

1.)

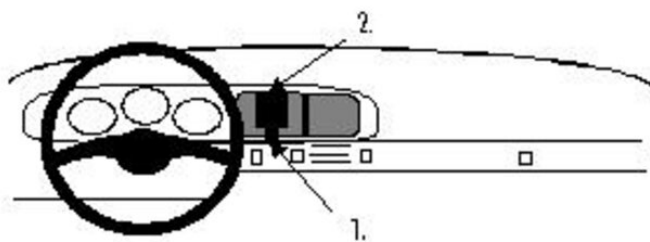

Attention! Read all instructions before attaching the ProClip.

1. Hook + press the grooved edge on the lower part of the ProClip into the gap between the air vent frame and the padded dashboard at pos.

1.

2. Hook + press the grooved edge on the upper part of the ProClip over the air vent panel edge at pos. 2.