


Manual, Assembly instruction: Brodit 851850

Center mount

1.)

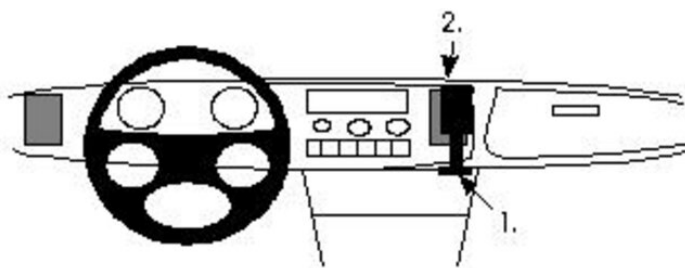

Attention! Read all instructions before attaching the ProClip

1. Clean the surface at pos 1 with the enclosed alcohol pad. Press the grooved edge on the lower part of the ProClip into the gap between the center console and the dashboard at pos.

1.

2. Pull the grooved edge on the upper part of the ProClip upwards and then press into the gap between the narrow silver panel and the padded dashboard at pos.

2. Press until you see or hear + feel it snaps into place.