


Manual, Assembly instruction: Brodit 851889

Angled mount

1.)

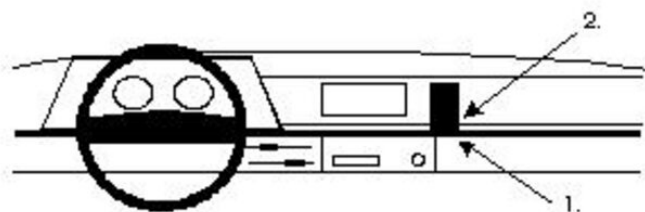

Peel off the cover of adhesive tape on the ProClip.

1. Hook angled edge on the lower part of the ProClip under the edge at pos.

1.

2. Hook the angled edge on the upper part of the ProClip into the gap on the top of the dashboard at pos. 2.