


Manual, Assembly instruction: Brodit 851912

Center mount

1.)

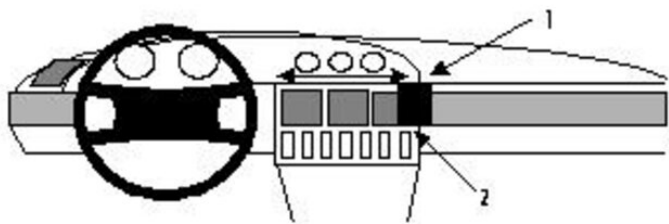

Attention! Read all instructions before attaching the ProClip.

1. Press the grooved edge on the upper part of the ProClip into the gap between the center console and the padded ledge above it at pos.

1. Press until you see or hear + feel it snaps into place.

2. Press the grooved edge on the lower part of the ProClip into the gap between the air vent frame and the frame surrounding the control buttons at pos.

2. Press until you see or hear + feel it snaps into place. Slide the ProClip sideways to desired position.