


## Manual, Assembly instruction: Brodit 851914

Angled mount NOT for dual airbag.

1.)

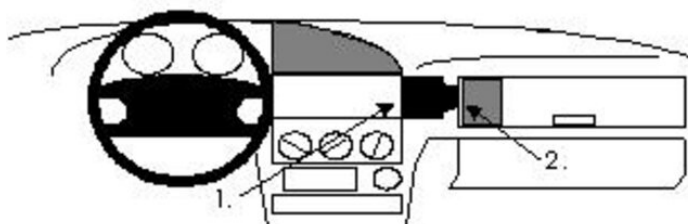

### **Attention! Read all instructions before attaching the ProClip**

1. Clean the surface at pos. 1 with the enclosed alcohol pad. Peel off the adhesive tape cover on the ProClip.
2. Press the left part of the ProClip, with adhesive tape, into the gap at pos.
- 1.
3. Press the right part of the ProClip, with groove, into the gap at pos. 2 .