


Manual, Assembly instruction: Brodit 851937

Center mount

1.)

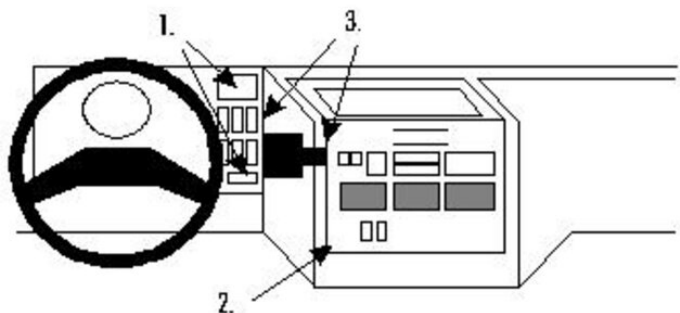

Attention! Read all instructions before attaching the ProClip.

1. Remove the cover plates at pos.
1. Loosen the screws. Pull the center panel at pos. 2 upwards.
2. Press the ProClip into place at pos.
3. Screw on the screws. Put back the panel.