


Manual, Assembly instruction: Brodit 851960

Angled mount

1.)

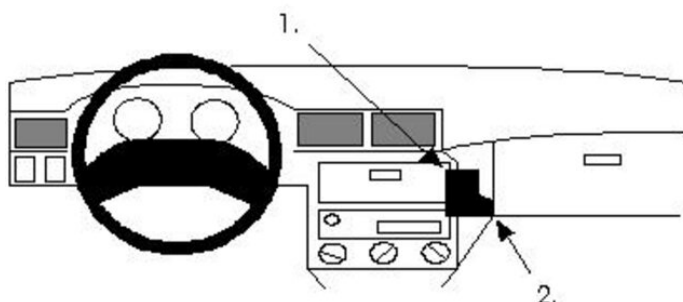

Attention! Read all instructions before attaching the ProClip

1. Open the glove compartment. Loosen the screw at pos.
2. Clean the surface at pos. 1 and pos. 2 with the enclosed alcohol pad. Peel off both adhesive tape covers on the ProClip.
2. Press the left part of the ProClip into the gap at pos.
1. Slide the ProClip upwards.
3. Press the long right part of the ProClip upwards into the gap behind the edge of the glove compartment. Screw on the screw.