


Manual, Assembly instruction: Brodit 851992

Angled mount

1.)

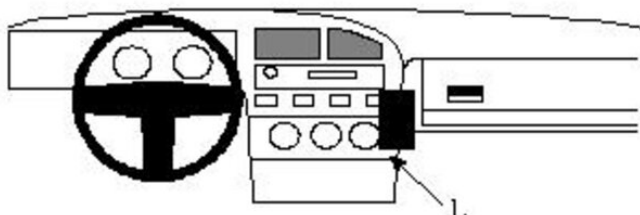

Attention! Read all instructions before attaching the ProClip.

1. Remove the panel surrounding the climate control wheels at pos.
1. Loosen the two screws on the right side.
2. Place the ProClip over the holes. Screw in the screws and put back the panel frame.