


Manual, Assembly instruction: Brodit 851994

Center mount

1.)

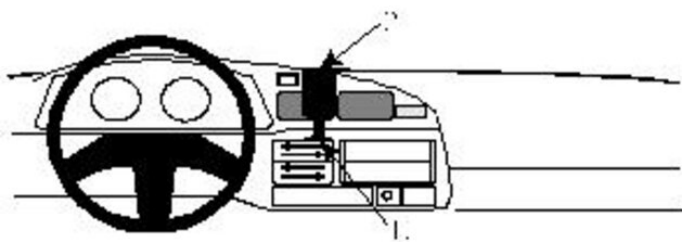

Attention! Read all instructions before attaching the ProClip.

1. Press the grooved edge on the lower part of the ProClip into the gap under the ledge at pos.

1.

2. Flip up the ProClip upward towards the air vent and hook the upper part over the edge at pos. 2.