


Manual, Assembly instruction: Brodit 851996

Center mount

1.)

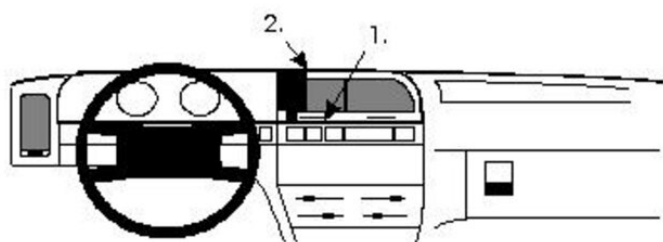

Attention! Read all instructions before attaching the ProClip

1. Clean the surface at pos. 1 with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.
2. Press the lower part of the ProClip, with adhesive tape, into the gap at pos.
- 1.
3. Press the upper part of the ProClip, with groove, into the gap above the air vent at pos. 2.