


Manual, Assembly instruction: Brodit 852022

Angled mount

1.)



2.)

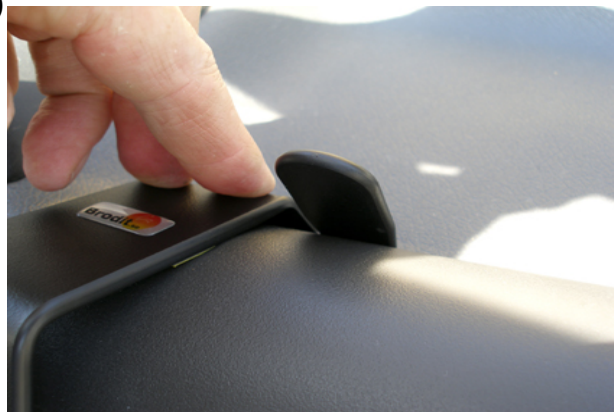

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Clean the area where the ProClip is to be installed with the enclosed alcohol pad. Press the thin end of the enclosed gap opener into the gap between the dashboard and the ledge. Open the glove compartment. Peel off the cover of the adhesive tape on the ProClip. Press the angled edge on the upper of the ProClip into the gap next to the gap opener.

2. Flip the ProClip downward so the upper angled edge hooks under the dashboard. Pull out the gap opener.

3. Press the grooved edge on the lower part of the ProClip into the gap between the glove compartment and the dashboard. Press until you hear/feel it snaps into place. Close the glove compartment.

4. The ProClip is in place.