


Manual, Assembly instruction: Brodit 852023

Angled mount

1.)

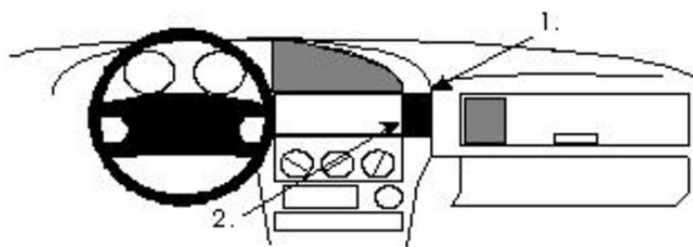

Attention! Read all instructions before attaching the ProClip

1. Clean the surface at pos. 2 with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.

2. Press the long right part of the ProClip into the gap at pos.

- 1.
3. Hook the left part of the ProClip, with adhesive tape, over the edge at pos. 2.