


Manual, Assembly instruction: Brodit 852032

Center mount

1.)

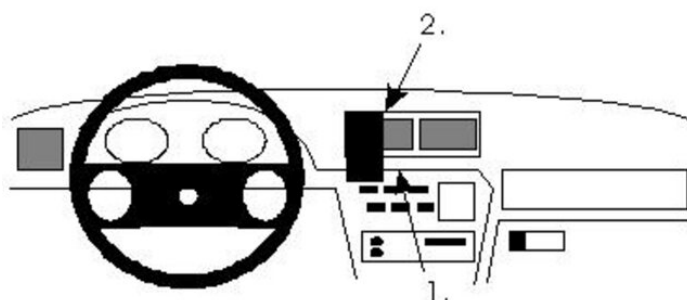

Attention! Read all instructions before attaching the ProClip

1. Hook the short lower part of the ProClip over the edge of the panel at pos.1.
2. Press the upper part of the ProClip into the gap above the air vent at pos. 2.