


Manual, Assembly instruction: Brodit 852038

Center mount

1.)

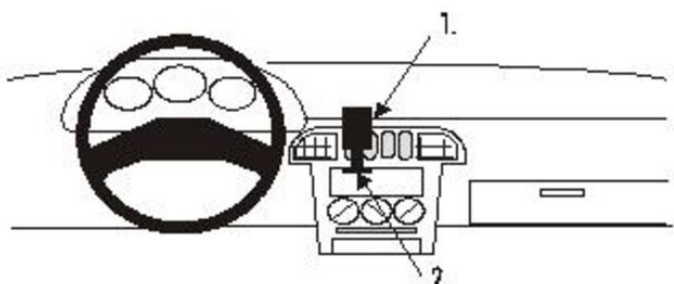

Attention! Read all instructions before attaching the ProClip

1. Remove the screw at pos.
2. Clean the surface at pos. 1 and pos. 2 with the enclosed alcohol pad. Peel off both adhesive tape covers on the ProClip.
2. Press the upper part of the ProClip, with adhesive tape, into the gap at pos.
- 1.
3. Screw on the screw at pos. 2.