


Manual, Assembly instruction: Brodit 852053

Center mount

1.)

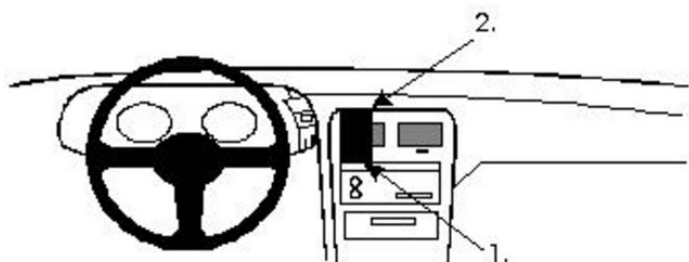

1. Press the angled edge on the lower part of the ProClip into the gap in the center console frame at pos.

1.

2. Flip the upper part of the ProClip forward towards the air vent and hook the angled edge over the air vent panel frame at pos. 2.