


## Manual, Assembly instruction: Brodit 852058

Center mount Polo 95-97: ONLY for Limousine. Polo 98-99: ONLY for Classic and Kombi.

1.)

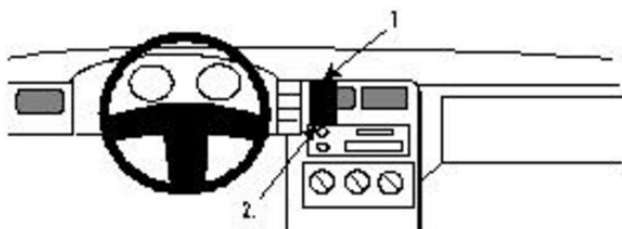

### **Attention! Read all instructions before attaching the ProClip**

1. Clean the surface at pos. 2 with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.
2. Press the upper part of the ProClip, with angle, into the gap above the panel frame at pos. 1 (very narrow)
3. Press the lower part of the ProClip, with adhesive tape, into the gap between the radio and the panel frame at pos. 2.