


Manual, Assembly instruction: Brodit 852069

Center mount

1.)

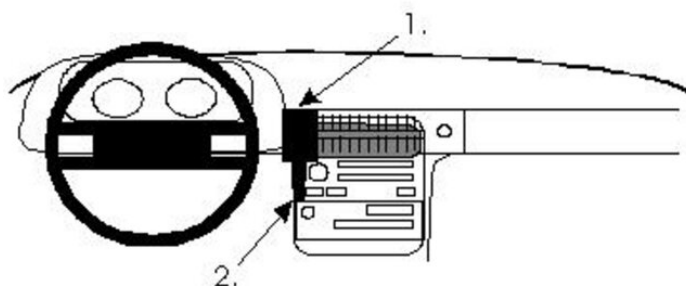

Attention! Read all instructions before attaching the ProClip.

1. Press the curved edge on the upper part of the ProClip carefully into the gap at 1.
2. Press the grooved edge on the lower part of the ProClip into the gap above the stereo at 2.