


Manual, Assembly instruction: Brodit 852072

Center mount

1.)

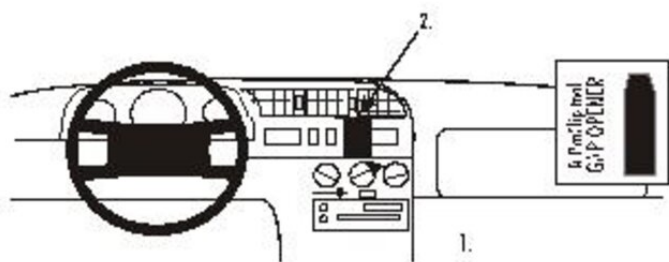

Attention! Read all instructions before attaching the ProClip

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap at pos.
1. Clean the surface at pos. 2 with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.
2. Press the lower part of the ProClip, with groove, into the gap next to the Gap Opener (Spaltöffner) at pos.
1. Pull out the Gap Opener (Spaltöffner).
3. Hook the upper part of the ProClip, with adhesive tape, over the edge at pos.
2. Press on the ProClip so the adhesive tape attaches.