


Manual, Assembly instruction: Brodit 852093

Center mount

1.)

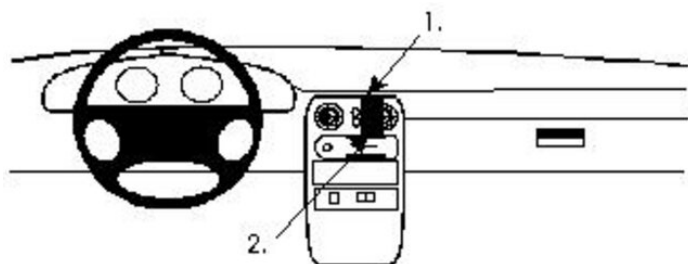

Attention! Read all instructions before attaching the ProClip

1. Clean the surface at pos. 2 with the enclosed alcohol pad. Peel off the adhesive tape cover on the ProClip.
2. Press the upper part of the ProClip, with curve, into the gap at pos.
- 1.
3. Hook the lower part of the ProClip, with adhesive tape, under the edge at pos. 2.