


Manual, Assembly instruction: Brodit 852140

Center mount

1.)

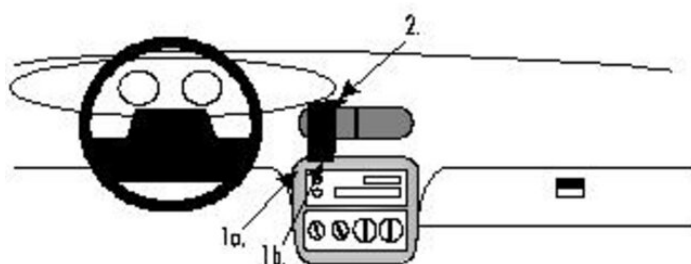

Attention! Read all instructions before attaching the ProClip

1. Clean the surface at pos. 1 and pos. 2 with the enclosed alcohol pad. Peel off both adhesive tape covers on the ProClip.
2. Press the lower part of the ProClip, with curve, into the gap at pos. 1b. You may have to push the panel forward at pos. 1a. to widen the gap.
3. Press the upper part of the ProClip against the top of the dashboard at pos. 2.