

Manual, Assembly instruction: Brodit 852174

Angled mount


1.)



2.)



3.)

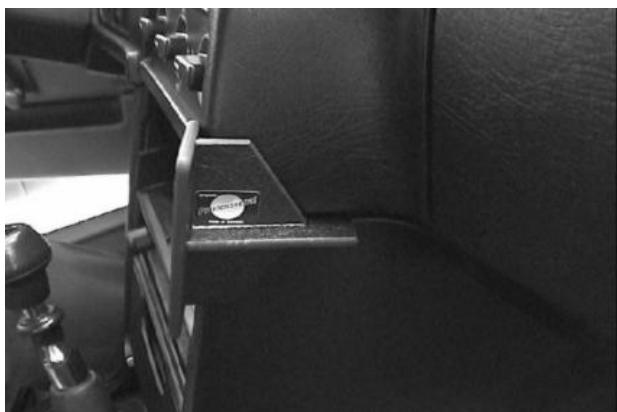

4.)



Attention! Read all instructions before attaching the ProClip. Clean the surface at pos. 1 with the enclosed alcohol pad. Peel off the adhesive tape cover on the ProClip.

1. Slide the ProClip into the gap between the two padded dashboard part at pos. 1 . Then press on the side of the ProClip so the adhesive tapes attaches.