


Manual, Assembly instruction: Brodit 852249

Center mount

1.)

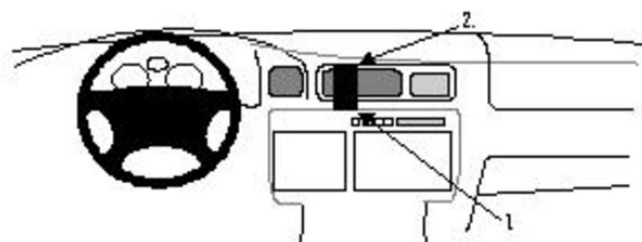

Attention! Read all instructions before attaching the ProClip.

1. Hold the ProClip in a horizontal position with the inside of holder upwards and the curved part directed towards the dashboard.

2. Press the curved part of the ProClip, keep the horizontal position, into the gap between the panel frame (underneath the padded ledge) and the padded ledge at pos.

1.

3. Push the ProClip upwards and forward so the upper part with groove hooks over the edge of the air vent at po.2. Press until you hear + feel it snap into place.