


Manual, Assembly instruction: Brodit 852282

Center mount

1.)

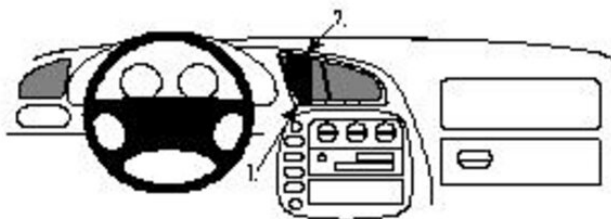

Attention! Read all instructions before attaching the ProClip

1. Press the lower part of the ProClip into the gap between the air vent and the panel frame at pos.

1.

2. Press the upper part of the ProClip into the gap between the air vent and the panel frame at pos. 2.